





## MX49 | Control Joint Cover – 2mm Edge

MX49 is designed to be butted up to existing vinyl flooring after a relocated building has been re-assembled.

### Product Specifications

Product Code:..... MX49  
Aluminium:..... 6063/T6 Hardness  
Overall Length: .....3.66m  
Horizontal Width: .....72mm  
Vertical Height: .....3.5mm  
Finish: ..... Matte Natural Anodised  
Processing:..... Drilled and Countersunk  
Pieces Per Carton:..... 10 Lengths

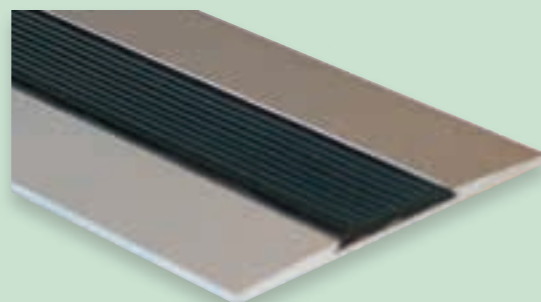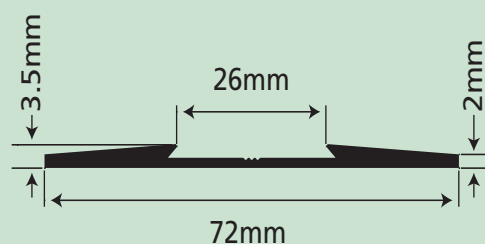

### Installation Instructions

Fixed by screwing down either side of the re-assembled floor, butting to the existing vinyl flooring surface, thereby providing reinforcement to the re-joined floor. (Use of MX48 Ramped Control Joint is recommended should you need to install over existing vinyl tiles or sheetgoods.)

Recommended to be used with HT26 (26mm) Black/Grey/Safety Yellow TPE inserts (sold separately).

To ensure the TPE insert is correctly adhered to the aluminium nosing, we recommend the use of MJS Max Bond 102 Super Contact Adhesive.

Best results are obtained by ensuring both bonding surfaces are clean, then applying an even coat of adhesive to both surfaces by brush or roller. Allow solvent to evaporate and adhesive to become tacky and dry to touch. Time to tack up is 10-15 minutes at 20°C, open time is approximately 45 minutes.

Ensure the insert is correctly positioned before bringing it into contact with the nosing, as no adjustment is possible once the surfaces have met. Complete by using a hand roller, pressing enough to bring both surfaces into contact.

**Note:** Where the control joint cover is used over a wooden, non-tactile surface, it is recommended that a bead of silicone or mastic adhesive is applied to the underside to eliminate “tapping” that may occur due to uneven sub-floor surfaces.

### MJS STOCKISTS